



Made by Ginlong Technologies

LAN Stick Quick User Guide

Ginlong-LANS Version: 1.0



SN:

Delivery Content

- 1 pc LAN Stick
- 1 pc LAN Stick Quick User Guide

Introduction

LAN Stick is mainly used in Solis inverters to realize simple and quick access to Internet. Users can easily check device information by logging in the monitoring center (www.ginlongmonitoring.com). The communication topology is as shown below:



Description of Symbols

To ensure normal use of the device, before using the device, be sure that:

- The connected router can normally access to Internet.
- The communication address of the inverter MUST BE "01", which is default value.

NOTES

Network switch layers Number of layers≤4
 Shielded Twisted Pair Total length < 50 meters
For distances >50m use Ethernet range extender

1 Electrical Connection

 
Connect LAN Stick to the corresponding interface on the inverter. Solis-5K-2G-US is used as an example in this manual. Please perform relevant operations as indicated below:



LAN Stick Interface

LAN Stick Installation

- Insert LAN Stick to COM port.
- Fasten the LANI Stick.

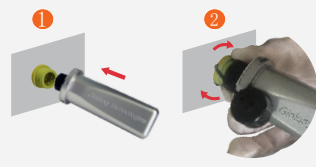

NOTES

The device must be kept away from large metal objects and electrical devices with strong magnetic fields, such as microwave oven, refrigerator, cordless phone, concrete wall, PV panel and metal wall, to ensure the communication quality. Communication quality may be affected in lightning storms.

2 Register on Ginlongmonitoring

 
Open a web browser and visit the Ginlongmonitoring website: <http://www.ginlongmonitoring.com>

Supported browsers: Internet Explore 8+, Google Chrome 10+, Firefox 9+, Safari 4+

Click **Register Now**.



Fill in your email address and password, then click **Next**.

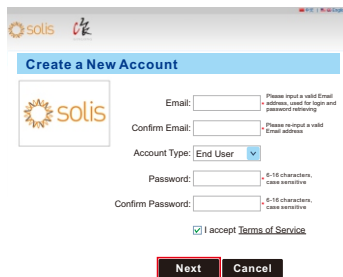

Fill in the information as required, then click **Complete**.

Create a New Account

Type Of Site: **PV Power Plant**

Site Name: _____ Maximum 20 Letters

Upload Image: **Default.jpg** Recommended image size: 300px×220px

OK

Country: **China**

Province/State: **Zhejiang**

City: **Ningbo**

Street: _____ Locate Your Site On Map

ZIP Code: _____

Timezone: **(GMT+08:00)B**

Number Format: **1234567.89**

Temperature Unit: **°F**

System Size(kWp): _____

Feed-in Tariff(FIT): **AUD**

Panel Type: **3S**

Inverter Type: **Ginlong**

Description: _____

Make This Site Public

Registration

Datalogger S/N: _____

Installer: _____

Specific type: _____

Serial number of inverter: _____

Number of installation: _____

Contact

 
Name: _____

Phone: _____


Complete **Cancel**

3 Log in Ginlongmonitoring website to manage power station

After successful registration, open the login page of Ginlongmonitoring and input your E-mail and password to access the monitoring system and start monitoring and management of power plants.

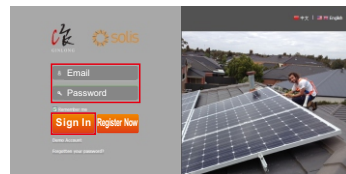


 Notice: If users access the monitoring system for the first time within ten minutes after successful registration, please check the "Real Time" interface. If there are data shown in the Real Time interface, network setting of data logger and other connection are deemed successful.

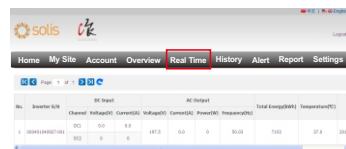


4 Remote setting of Ginlongmonitoring

 
For example, set the station for 'PV Power Plant' as the following pictures.

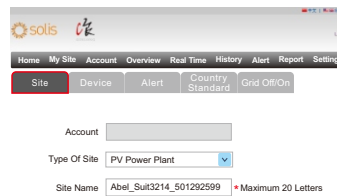

 There are four remote setting functions of 'Grid Off/On', 'Country Standard', 'Controller' under the 'Setting' choice.

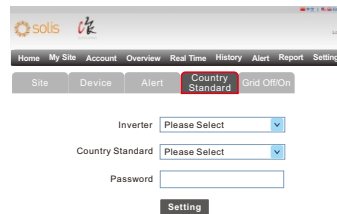

 There are two remote setting functions of 'Grid Off/On', 'Country Standard', under the 'Setting' choice.

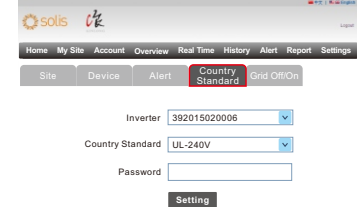

Ningbo Ginlong Technologies Co., Ltd.
 NO. 57 Jintong Road, Binhai Industrial Park
 Xiangshan, Ningbo, Zhejiang, 315712, P.R.China
 Tel: +86(0)574 6578 1806
 Fax: +86(0)574 6578 1606
 Email: info@ginlong.com
 Web: www.ginlong.com

Please record the serial number of your monitor and quote this when you contact us.